

Maintaining the Loader in Safe Operating Condition

- Follow the manufacturer's instructions for maintaining the loader
- Keep the foot controls and the operator's compartment free of mud, ice, snow and debris
- If the machine cannot be serviced with the bucket on the ground, use the lift arm supports recommended or provided by the manufacturer. If the machine is not equipped with lift arm supports, contact the equipment dealer or manufacturer's rep for help in selecting proper supports
- Never work on the machine with the engine running unless directed to do so by the operator's manual. Follow the manufacturer's safety recommendations to complete the task. If the adjustments require that the engine be in operation, use two persons to perform the task
- Before servicing; set the parking brake, lower all attachments and buckets to the ground. Turn off the engine and remove the key.